MiSP Simple Machines / Inclined Plane Worksheet #2b L2

Nam	e Date	
	MODIFIED FROM: MAKING THE GRADE (AIMS <i>MACHINE SHOP</i>)	
Key Ç	Question: How much force does it take to lift 400 grams 20 centimeters in height?	
	ing Goal: Students will measure and compare the forces needed to lift an object straight up an inclined plane.	
Proble	em:	
How o	loes the length of an inclined plane affect the force?	
Proce	dures:	
1.	Follow the instructions given by your teacher for setting up the cup or tub (resistance) and	
	the ramp so it goes to a height of 20 cm. She or he will describe how to read the spring scale	
	and attach it to the tub or cup. The tub or cup will have a mass of approximately 400 g. Your	
	teacher will tell you if it is a different mass. In addition, your teacher will tell you the	
	measurement units that you will be using to measure force.	
	Make all force measurements while you are lifting or pulling the tub or cup, after the initial	
	start from rest. Lifting and pulling should be done with a nice, even, continuous, smooth	
	motion—no jerking.	
Check off each step as you do the experiment.		
	Lift the filled cup or tub to a height of 20 cm. Measure the force used to move the cup or	
	tub, using the spring scale.	
	Write the force used in units on the data chart.	
	Place the inclined plane ramp on the 20 cm elevation so that the ramp length is 40 cm.	
	Pull the cup or tub up the ramp. Measure the force used to move the cup or tub up the	
	ramp, using the spring scale.	
	Write the force used in units on the data chart.	
	Repeat steps 4, 5, and 6 but make the ramp length 50 cm.	



Repeat steps 4, 5, and 6 but make the ramp length 60 cm.

Repeat steps 4, 5, and 6 but make the ramp length 70 cm.
Repeat steps 4, 5, and 6 but make the ramp length 80 cm.
Repeat steps 4, 5, and 6 but make the ramp length 90 cm.
Repeat steps 4, 5, and 6 but make the ramp length 100 cm.

Record your data:


Data Table


Distance Resistance	Effort Force to move the
(cup or tub) Traveled	Resistance (cup or tub)
(cm)	units
20	
straight lift	
40	
inclined plane	
50	
inclined plane	
60	
inclined plane	
70	
inclined plane	
80	
inclined plane	
90	
inclined plane	
100	
inclined plane	

Graph your data:

Use the data table to create a graph on the next page. The graph will show the relationship between the distance the resistance (tub or cup) moved and the force needed to move it. This information is in gray in the data table.

- Label the *x*-axis.
- Label the *y*-axis

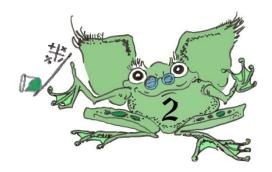


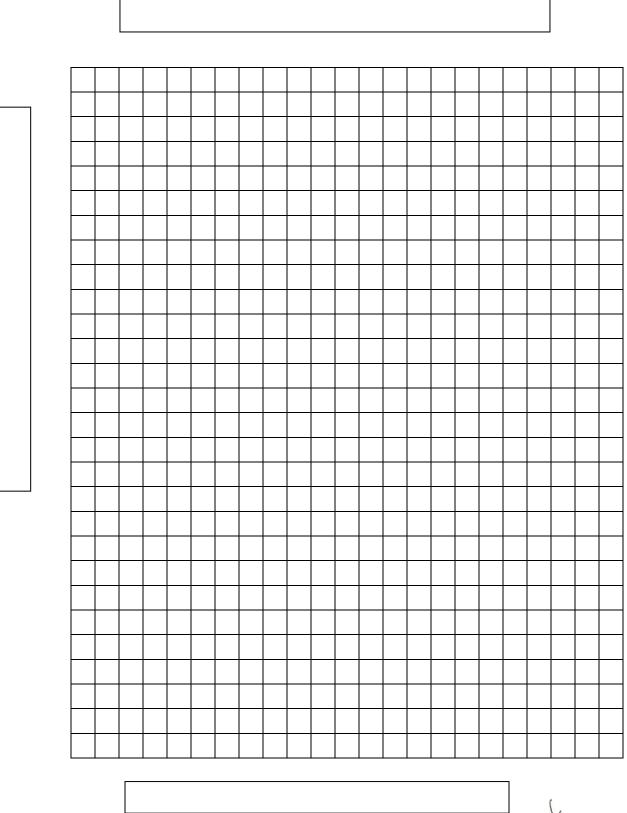

Discussion Questions:

Making the Grade Connecting Learning (pp. 195–196, #2–#4, #8)

1.	What generalization about the inclined plane can be made from the graphs?	
2.	How could you use an inclined plane to help you?	
3.	Why did the force go down as the length of the plane got longer? Did you reach the same height?	
4. Theoretically, comparing the amount of force to the distance to pull for each example she give you the same results. In the activity you will find that these are not exactly the same causes the difference?		
5.	Use the graph to predict the force that would be used if the resistance traveled	
	55 cm:	
	110 cm:	
6.	Look at the line segment on the graph between the 40 cm and 50 cm data points. Complete the sentence, "As the <i>x</i> -values on this graph INCREASE,	
	the γ -values ."	

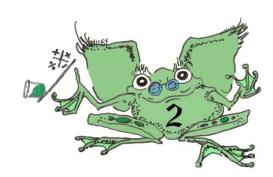

7. Use the information from the graph to calculate the unit rate of change (slope) for the line segment between the 40 cm and 50 cm data points. Use the formula below to complete the chart.

Unit Rate of Change = Δ Effort Force (units) = $\Delta y = (y_2 - y_1)$ Δ Distance Resistance Traveled (cm) $\Delta x = (x_2 - x_1)$

Ordered Pair used for calculation (x_1, y_1) (x_2, y_2)	Δ Effort Force (units) Δy	Δ Distance Resistance Traveled (cm) Δx	Unit Rate of Change (slope) Δy/Δx

8.	Put the calculated unit rate of change (slope) into words to explain how inclined planes make it
	easier to move objects to higher locations.

